11. Operation Instruction & Installation

11-1 Product Features and Functions

11-1-1 Control Buttons

You can control your TV's basic features, including the on-screen menu.
To use the more advanced features, you must use the remote control.

CL21M6

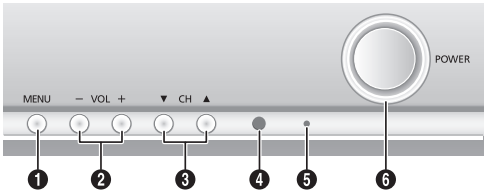

CL21M2 / CL21M21

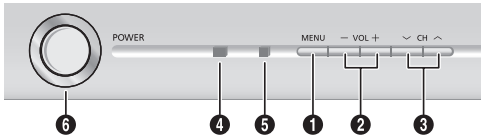

CL21T21

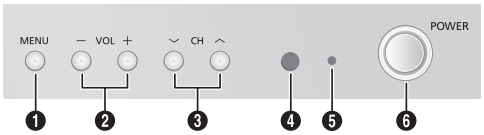

1 MENU
Press to see an on-screen menu of your TV's features.

2 – VOL +
Press to increase or decrease the volume. Also used to select items on the on-screen menu.

3 ∨(▼) CH ∧(▲)
Press to change channels. Also press to move between items on the on-screen menu.

4 Remote Control Sensor
Aim the remote control towards this spot on the TV.

5 Indicator
(depending on the model)
- Stand-By ; Red
  Lights up when you turn the power off.
  - Power Off ; Red
  - Power On ; Off
- TIMER ; Green
  When the TV is turned on, the TIMER indicator blinks five times. This indicator illuminates when the TIMER mode is set to the "On" position after setting the clock and either the On timer or Off timer, with the remote control. Even if the power is turned off, this indicator stays lit. (Clock must be set before using this function.)

6 POWER
Press to turn the TV on and off.

11-1-2 Side Panel Jacks

You can use the side panel jacks to connect an A/V component that is used only occasionally, such as a camcorder or video game.

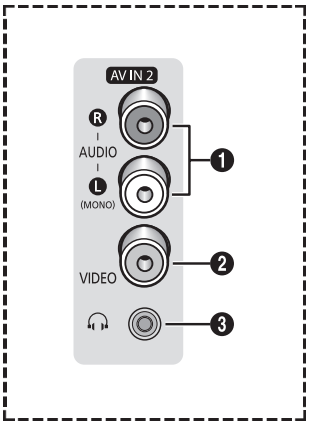

1 AUDIO Input
Connect audio signals from a camcorder or video game.

2 VIDEO Input
Connect a video signal from a camcorder or video game.

3 Headphone
Connect a set of external headphones to this jack for private listening.

- Please be sure to match the color coded input terminals and cable jacks.

11-1-3 Connection Jacks (Rear)

Use the rear panel jacks to connect an A/V component that will be connected continuously, such as a VCR or a DVD player. Because there are three sets of input jacks, you can connect three different A/V components (i.e., a VCR and a DVD, 2 VCRs, etc.)

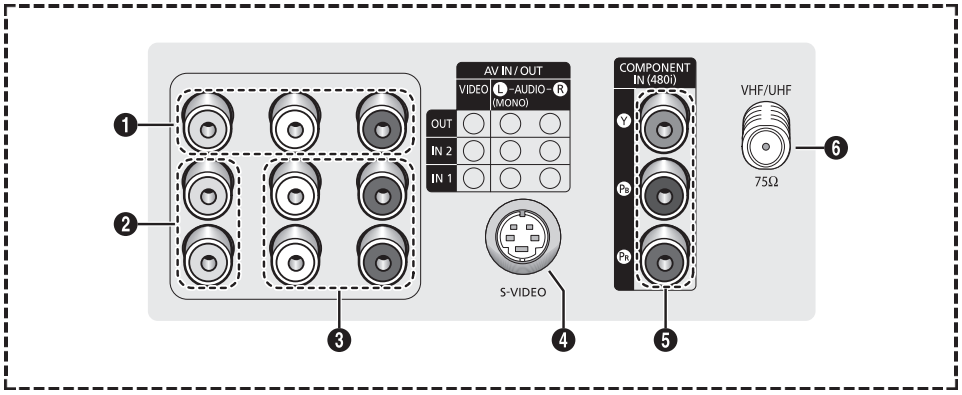

- Please be sure to match the color coded input terminals and cable jacks.

1 Audio-Video Output jacks
Connect to the audio/video input jacks of a recording VCR.

2 Video Input jacks
Connect to the video output jacks of VCRs, DVD players and similar devices.

3 Audio Input jacks
Connect to the audio output jacks of VCRs, DVD players and similar devices.
When using the S-Video or Component Video input, connect audio jacks to “AV IN 2 (AUDIO-L/R)”.

4 S-Video Input jack
Connect to S-Video output jack of an S-VHS VCR or DVD player.

5 Component Video Input jacks (Y, Pb, Pr)
Connect to the Component audio and video outputs of DVD or DTV set-top box. 480i video signal input is available.

6 VHF/UHF
Connect to an antenna or to a cable TV system.

11-1-4 Remote Control

You can use the remote control up to about 23 feet from the TV. When using the remote, always point it directly at the TV. You can also use your remote control to operate your VCR, DVD, Cable box, and Samsung Set-top Boxes.

1 POWER
Turns the TV on and off.

2 Number buttons
Press to select channels directly on the TV.

3 +100
Press to select channels over 100. For example, to select channel 121, press "+100", then press "2" and "1".

4 MUTE
Press to temporarily cut off the sound.

5 VOL +, VOL -
Press to increase or decrease the volume.

6 SLEEP
Press to select a preset time interval for automatic shut off.

7 MENU
Displays the main on-screen menu.

8 ▲/▼/◀/▶
Controls the cursor in the menu.

9 ENTER
While using the on-screen menus, press ENTER to activate (or change) a particular item.

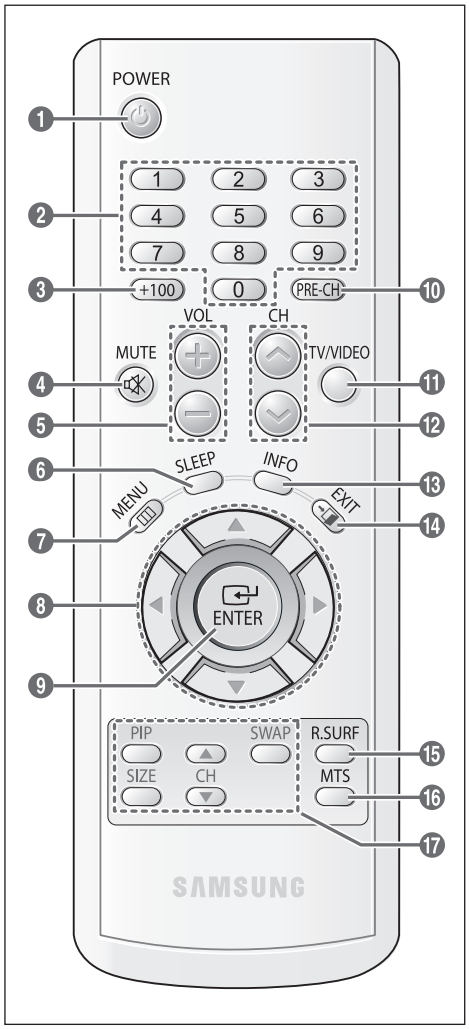

10 PRE-CH
Tunes to the previous channel.

11 TV/VIDEO
Press to display all of the available video sources.

12 CH ∧, CH ∨
Press to change channels.

13 INFO
Press to display information on the TV screen.

14 EXIT
Press to exit the menu.

15 R.SURF
Press to automatically return to a preferred channel after a user-preset time delay.

16 MTS
(Multi-channel Television Sound)
Press to choose "Stereo", "Mono", or "SAP" (Secondary Audio Program).

17 PIP Controls
(depending on the model)

PIP
Press to activate or deactivate the PIP function.

SWAP
Press to interchange the main picture and sub-picture.

SIZE
Press to select a size ("Large" or "Small") of the sub-picture.

CH
Press to select a channel of the sub-picture only when the "Source" is set to "TV".

MEMO